

USER'S MANUAL

PU JK 01



LCD Control Panel

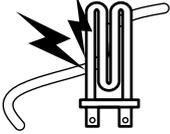
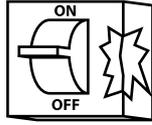
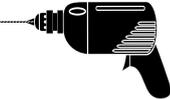
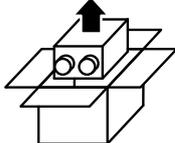
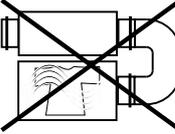
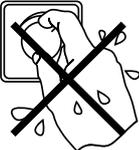
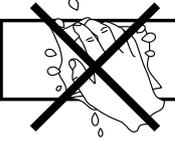
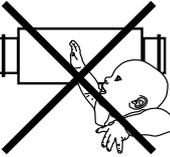
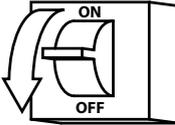
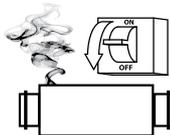
CONTENTS

Safety Requirements	2
Main Technical Data	3
Panel Mounting	3
Panel Operation	4
Factory Settings	8

SAFETY REQUIREMENTS


- Read the user's manual carefully prior to the operation and installation of the control panel.
- Installation and operation of the control panel shall be performed in accordance with the present user's manual as well as the provisions of all the applicable local and national construction, electrical and technical codes and standards.
- The warnings contained in the present user's manual must be considered most seriously since they contain vital personal safety information.
- Failure to follow the safety regulations may result in an injury or control panel damage.
- Read the manual carefully and keep it as long as you use the control panel.
- While transferring the equipment control the user's manual must be turned over to the receiving operator.

SAFETY PRECAUTIONS DURING INSTALLATION AND OPERATION

	The control panel must be disconnected from power supply prior to every installation or repair operation.		The control panel must not be operated outside the temperature range stated in the user's manual or in aggressive or explosive environments.
	Do not position any heating devices or other equipment in close proximity to the control panel power cord.		Do not use damaged equipment or conductors to connect the panel to the power mains.
	While installing the control panel follow the safety regulations specific to the use of electric tools.		Unpack the panel with care.
	Do not change the power cord length at your own discretion. Do not bend the power cable. Avoid damaging the power cable.		Use the panel only as originally intended.
	Do not touch the control panel with wet hands. Do not carry out the control panel maintenance with wet hands.		Avoid penetration of water onto the electric parts of the panel.
	Do not let children operate the panel.		The control panel must be disconnected from the power supply prior to maintenance operations.
	In case of unusual sounds, smoke disconnect the control panel from power supply and contact the service centre.		Keep the power cord intact while operating the control unit. Do not put any foreign objects on top of the power cord.



MAIN TECHNICAL DATA

PARAMETER	VALUE
Ambient Temperature [°C]	From +5 to +40
Relative Humidity [%]	From 5 to 80 (no condensation)
Recommended cable cross section [mm ²]	0.22 - 0.25
Material	Plastic
Dimensions (WxHxD) [mm]	86x86x13
Cable Length [m]	Up to 15
IP Code	IP20

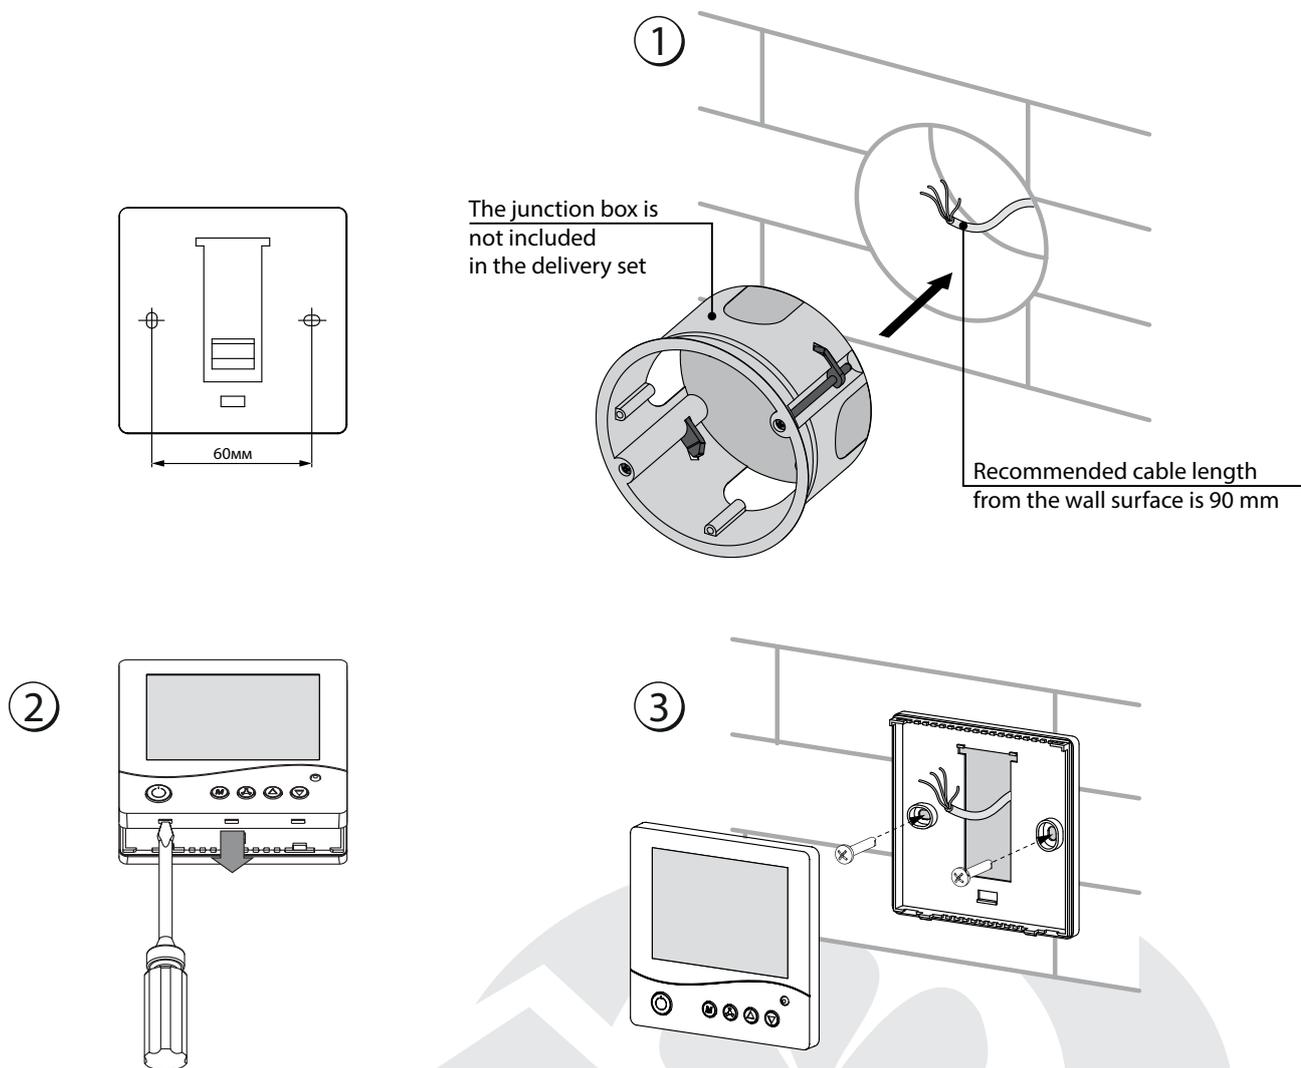PANEL INSTALLATION


CONTROL PANEL BUTTON FUNCTIONS

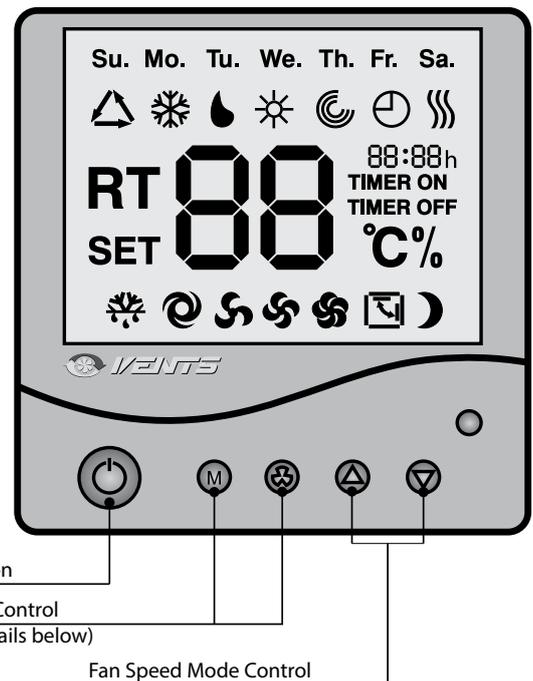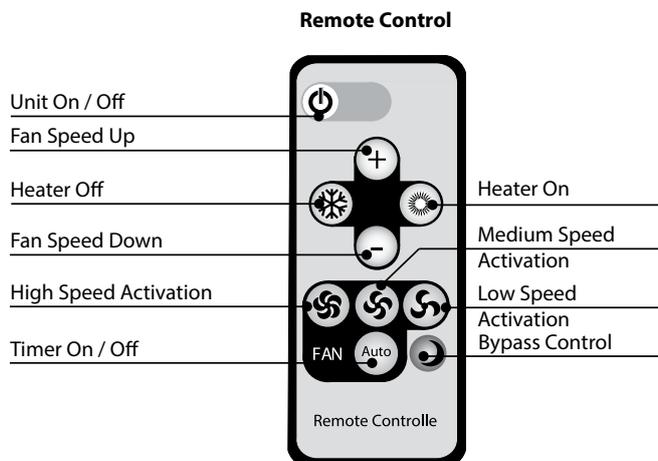Wall-Mounted Control Panel



1. Unit On / Off

The unit can be switched on and off using:

- The wall-mounted control panel:
 - Unit On - press the button briefly;
 - Unit Off - press and hold the button for 3 seconds;
- The remote control:
 - Unit On - press the button briefly;
 - Unit Off - press and hold the button for 3 seconds;

While the ventilation unit is off the control panel LCD screen displays the following information:

- Room temperature;
- Week day;
- Time;
- Deactivation indicator ;
- In the heater cooling down mode the indicator (blowing) lights up and the blowing countdown (min:sec) starts.



While the ventilation unit is on the control panel LCD screen displays the following information:

- Room temperature;
- Week day;
- Time;
- Fan speed indication ;
- Bypass status. The indicator lights up when the bypass opens;
- Timer status:
 - the **TIMER ON** indicator lights up when the timer is activated;
 - the **TIMER OFF** indicator glows when the timer is off;
- Heater status:
 - the indicator glows while the heater is on.



2. Ventilation Unit Mode Control.

The speed of the ventilation unit fans is controlled using:

- The control panel: Press the button to increase the speed or the button to reduce the speed of the unit fans (Low Speed - Medium Speed - High Speed - Humidity Feedback Control).
- The remote control: Press the button to increase the speed or the button to reduce the speed of the unit fans (Low Speed - Medium Speed - High Speed - Humidity Feedback Control).
- The remote control: Press the button to engage low speed, the button to engage medium speed and the button to engage high speed respectively.

The control panel display shows the current fan speed information:

- Indicator — Low Speed mode;
- Indicator — Medium Speed mode;
- Indicator — High Speed mode.



ATTENTION! TO USE HUMIDITY FEEDBACK CONTROL INSTALL A DUCT HUMIDITY SENSOR (SEPARATELY ORDERED ACCESSORY) AND ENABLE THIS FUNCTION VIA THE SERVICE MENU.

3. User Menu.

To enter the user menu press the button. Press the button once again to access various functions of the ventilation unit. To exit the user menu, press the button. The User Menu is exited automatically after 1 minute of user's inactivity.

The User Menu enables access to the main functions of the ventilation unit:

- Bypass Control;
- Heater On / Off;
- Timer On / Off;
- Service Menu Access;

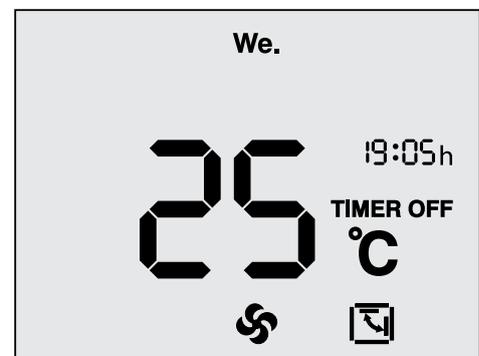
4. Bypass Control

To set Bypass Control to manual, use the button to enter the user menu. Select Bypass Control mode. While in the Bypass Control mode the bypass indicator is blinking.

Use the and buttons to set the bypass position:

- — Bypass open.
- — Bypass closed.

To control the bypass position via the remote control, use the button.



5. Heater On / Off

To control the heater status, use the button to enter the user menu. Select heater control mode. While in the heater control mode the heater status indicator is blinking.

Use the and buttons to set the heater status:

- the indicator is blinking fast - the heater is off.
- the indicator is blinking slowly - the heater is on.

From the remote control:

- press the button to switch the heater on.
- press the button to switch the heater off.



6. Timer On / Off

The timer is used to switch the fans to the speed defined in the service menu («Timer Mode Air Flow» parameter) with an automatic return to the previous speed after a set time period. The timer operation period is defined via the service menu.

To control the timer status, use the  button to enter the user menu.

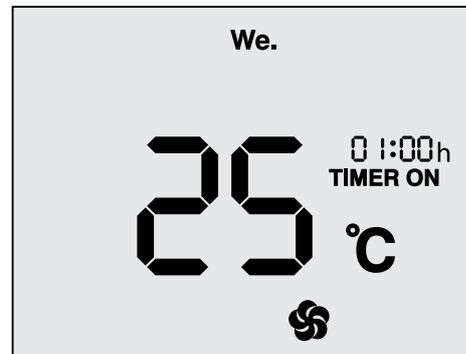
Select timer control mode. While in the timer control mode the **TIMER OFF** indicator is blinking.

Use the  and  buttons to set the timer status:

TIMER ON — The timer is On.

TIMER OFF — The timer is Off.

To control the timer via the remote control, use the  button.



7. Service Menu.

To access the service menu, enter the User Menu by pressing the  button and select the service menu access mode.

While in the service menu access mode the **SET** indicator is blinking.

Then press the  button.

The service menu provides access to a number of ventilation unit parameters such as:

- Date and Time Setup.
- Unit Parameters Setup.
- Timer Setup.
- Temperature Indication Correction.
- Reset to Factory Settings.
- Motor Hour Reset.
- Humidity Feedback Control Activation.



8. Date and Time Setup.

To set the current date and time, enter the service menu and use the  button to select the date and time setup mode.

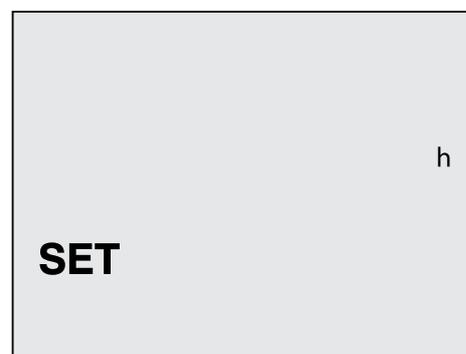
While in the date and time setup mode the **SET** and **h** indicators on the control panel display are blinking.

Then press the  button to enter date and time setup mode.

Use the  button to select the parameter to be edited and set the desired value by means of the  and  buttons.

The date and time parameters appear in the following order:

- Minutes.
- Hours.
- Day of the Week.
- Date.
- Month.



9. Ventilation Unit Parameters Setup.

To set the ventilation unit parameters, enter the service menu and use the  button to select the date and time setup mode.

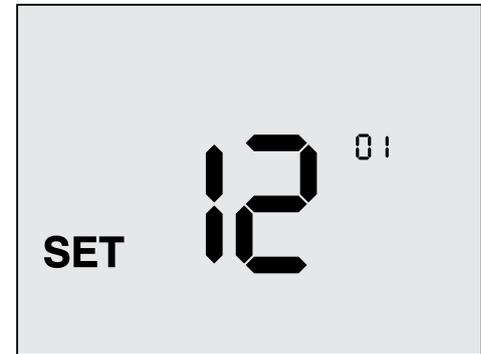
While in the date and time setup mode the **SET** indicator and the **Co** ventilation unit parameters setup indicator on the control panel display are blinking.

Then press the  button to enter the ventilation unit parameters setup mode.




Use the **M** and **↻** buttons to select the parameter code for editing and set the desired value by means of the **▲** and **▼** buttons.

The parameter codes are detailed in the table below (Page 9).




10. Timer Setup.

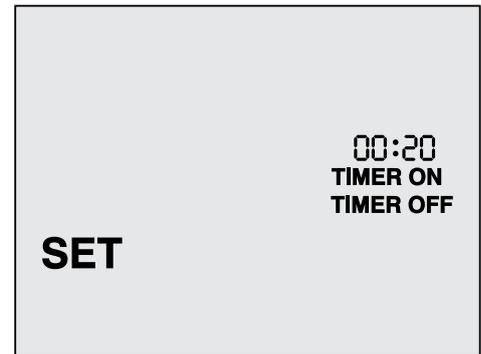To set the timer, enter the Service Menu and use the **M** button to select the Date and Time Setup mode. While in the date and time setup mode the **SET**, **TIMER ON** and **TIMER OFF** indicators on the control panel display are blinking. Then press the **↻** button to enter the timer setup mode. Use the **▲** and **▼** buttons to set the timer. The timer value is set in 5 minute increments.



11. Temperature Indication Correction.

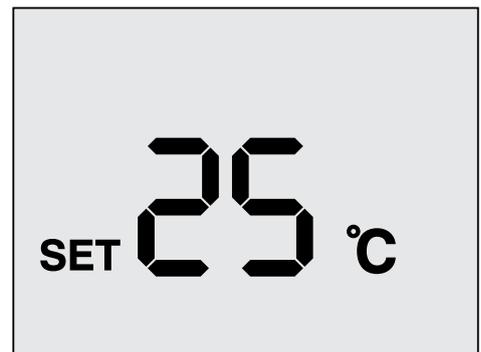To set a correction factor for the indications of the control panel temperature sensor, enter the service menu and use the **M** button to select the temperature indication correction mode. While in the temperature indication correction mode the **SET** and **C** indicators on the control panel display are blinking. Then press the **↻** button to enter the temperature indication correction mode. Use the **▲** and **▼** buttons to set the value which corresponds to the current air temperature in the room where the control panel is installed.



12. Reset to Factory Settings.

To reset the ventilation unit parameters to the factory settings, enter the service menu and use the **M** button to select the reset to factory settings mode.

While in the reset to factory settings mode the **SET** and the **dE** indicators on the control panel display are blinking. Then press the **↻** button to enter the Reset to Factory Defaults mode. Once there press the **▲** and **▼** buttons simultaneously.

The ventilation unit factory defaults are given in the table below.



13. Motor Hour Reset.

Enter the service menu and use the **M** buttons to select the motor hour reset mode (while in the motor hour reset mode the **SET** and **F** indicators on the control panel display are blinking).

Then press the **↻** button to enter the motor hour reset mode.

Once there press the **▲** and **▼** buttons simultaneously.

The ventilation unit factory defaults are given in the table below.



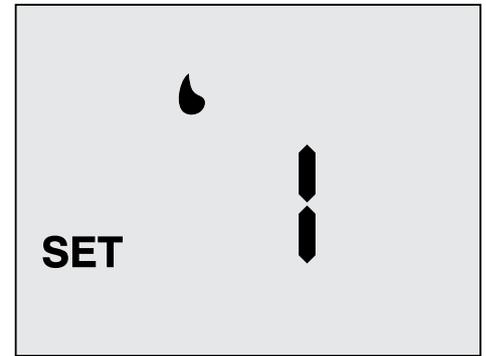
14. Humidity Feedback Control Activation.

To enable humidity feedback control, enter the service menu and use the **(M)** button to select the humidity feedback control activation mode. While in the humidity feedback control activation mode the **SET** and  indicators on the control panel display are blinking. Then press the **(M)** button to enter the humidity feedback control activation mode.

Use the **(▲)** and **(▼)** buttons to set the value:


0 — Disabled (Default).

! — Enabled.



15. Error codes.

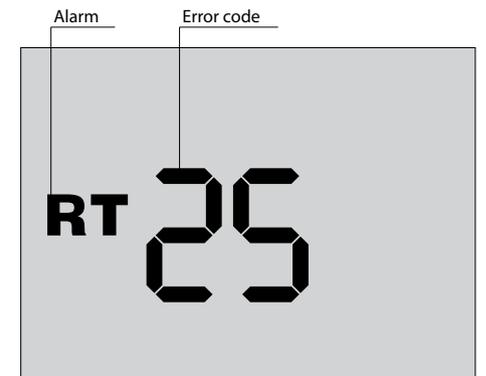In case of an emergency the unit switches off while the alarms are displayed on the control panel display screen: the flashing indicator **RT** and the error code indicator that indicates the error cause. Error codes and their description are shown in the table below.



ERROR CODE	HEATER TYPE	
	ELECTRIC	WATER
00	Control panel connection error.	
01	Outdoor temperature sensor failure.	
02	Heat exchanger freeze protection sensor malfunction.	
03		Return heat medium temperature sensor malfunction.
04		Heater freeze temperature sensor malfunction.
05	Duct temperature sensor malfunction.	
06	Duct humidity sensor malfunction.	
07	Supply fan malfunction.	
08	Extract fan malfunction.	
09	Electric heating element overheating (TK50).	
10	Fire alarm sensor is activated.	
11	TK-90 overheat sensor is activated.	
13		Insufficient operational water pressure indication. Note: when sufficient water pressure is present the unit is switched on automatically.
15	Breakage of the common power wire of the sensor or outside air temperature sensor malfunction.	
16	Breakage of the common power wire of the sensor or malfunction of the freeze protection temperature sensor of the heat exchanger.	
19	Breakage of the common power wire of the sensor or duct temperature sensor malfunction.	
23	The temperature in the supply air duct is below +5 degrees.	
24	Differential pressure switch (triggered by contact closure).	
25	Differential pressure switch (triggered by contact closure).	

Contact the unit seller to resolve the alarm.

FACTORY SETTINGS

Parameter Code	Parameter	Measurement Units	Measurement Range	Purpose	Default Value
6	Duct Temperature	°C	10-30	Temperature in the air duct.	25
7	Room Temperature	°C	10-30	Room temperature.	20
11	Timer Operation - Temperature	°C	10-40	Room temperature for timer operation.	20
12	Timer Operation - Air Flow.	-	1, 2, 3	Ventilation mode for timer operation.	1
18	Air Flow at Low Speed in Air Supply Mode	%	0-99	Air flow in the supply air duct at low speed (defined as a percentage of the maximum unit capacity).	40
19	Air Flow at Medium Speed in Air Supply Mode	%	0-99	Air flow in the supply air duct at medium speed (defined as a percentage of the maximum unit capacity).	70
20	Air Flow at High Speed in Air Supply Mode	%	0-99	Air flow in the supply air duct at high speed (defined as a percentage of the maximum unit capacity).	99
21	Temperature Sensor Selection.	-	0.1	Selection of the Active Temperature Sensor: 0 — Duct; 1 — Room.	0
22	Standby Mode Air Flow	-	0.1	Air Flow Rate in the Standby Mode.	1
23	Standby Mode Temperature	°C	10-30	User-defined Temperature in the Standby Mode.	20
29	Air Flow at Low Speed in Air Extract Mode	%	0-99	Air flow in the exhaust air duct at low speed (defined as a percentage of the maximum unit capacity).	40
30	Air Flow at Medium Speed in Air Extract Mode	%	0-99	Air flow in the exhaust air duct at medium speed (defined as a percentage of the maximum unit capacity).	70
31	Air Flow at High Speed in Air Extract Mode	%	0-99	Air flow in the exhaust air duct at high speed (defined as a percentage of the maximum unit capacity).	99
33	Supply Fan Shutdown.	-	1.0	Selection of the freezing protection logic by shutting down the supply fan: 1 — ON; 0 — OFF.	0
34	Supply Fan Operation Time	min.	5-60	Supply fan operation time while the supply fan shutdown mode is enabled.	20
35	Supply Fan Idling Time	min,	5-60	Supply fan idling time while the supply fan shutdown mode is enabled.	5
36	Supply Fan Shutdown Temperature	°C	-5 ... +5	The air duct temperature set point to enable freezing protection activation logic by shutting down the supply fan.	+3
39	Bypass Operation Mode.	-	1.0	Bypass operation mode selection: 0 — Regular operation mode to prevent heat exchanger freezing at low temperatures; 1 — Bypass opening for the ventilation mode.	1
41	Duct Humidity	%	10-80	Humidity level in the air duct.	50



RECYCLE AT THE END OF THE SERVICE LIFE.

DO NOT DISPOSE THE PRODUCT WITH UNSORTED MUNICIPAL TRASH.



